


# QUICK START GUIDE




## FOR MODELS:


- M25
- M30
- M35
- M40

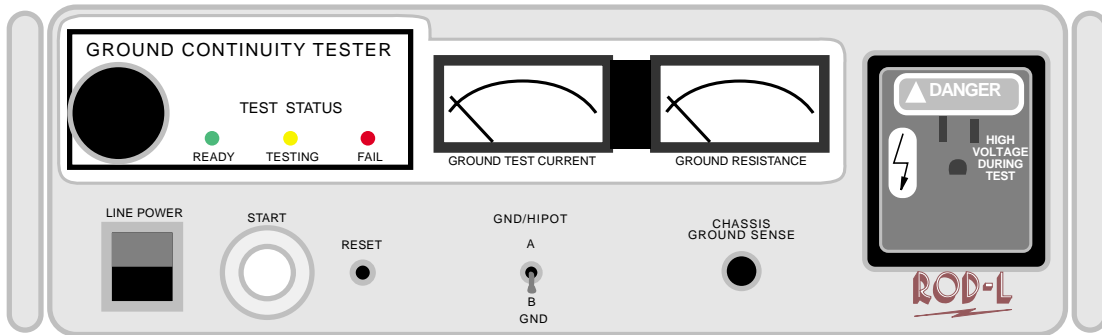

Phone: (650) 322-0711 • (800) 548-6305  
Fax: (650) 326-1993  
Online: [info@rodl.com](mailto:info@rodl.com) • [www.rodl.com](http://www.rodl.com)

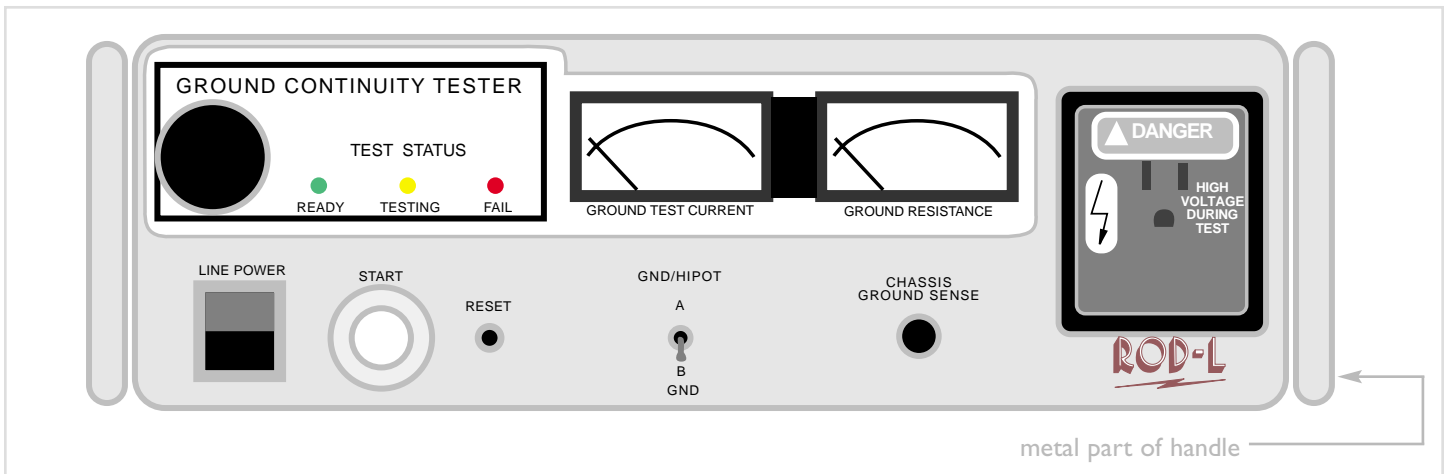


## WHAT IS NEEDED FOR FOR SELF TEST AND BASIC DEVICE TESTING:

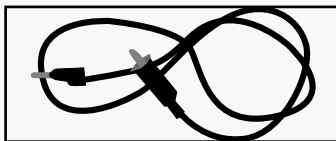


**Ground Sense Wire**

(The ground sense wire has a large banana plug which inserts into the "Chassis Ground Sense post on the front panel of the ROD-L unit and large alligator clip to be connected to the DUT)

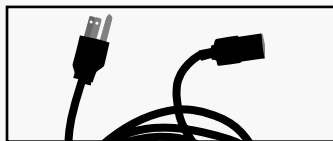

**Power Cord**

(The power cord connects to the rear panel of the ROD-L unit and to any grounded three-prong wall socket. Be sure to set the line voltage on rear panel to correct voltage i.e. 110 or 220)

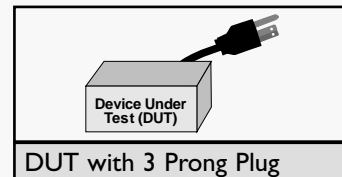

**DUT with 3 Prong Plug**

## I. SELF TEST

**I.a** Make sure the line voltage switch on rear panel is set to the correct value for the wall outlet (i.e. 110 or 220).

**I.b** Connect the POWER CORD to the rear of the ROD-L Unit and plug into any three-prong grounded wall outlet.

**I.c** Turn on the Line Power on the front panel of the ROD-L Unit. Green ready light should light.

**I.d** Insert banana end of GROUND SENSE WIRE into the Chassis Ground Sense post on the front panel of ROD-L unit.

**I.e** Connect alligator clip of ground sense wire to the metal portion of the ROD-L unit handle.

**I.f** The GND-HIPOT/GND switch should be in the "GND" position unless the unit is being interfaced with a hipot tester.

**I.g** Press "Start."

After you press start, the "Testing" light will light for a brief period of time and then shut off. This completes the self test.



Disconnecting the Ground Sense Wire from the Chassis Ground Sense post or the metal part of handle will cause the test to fail. The red fail light will light, the audible alarm will sound and the unit will shut down. If this happens, press the Reset button to turn off the alarm.

## 2. BASIC DEVICE TEST




Make sure your test parameters are set correctly on the rear panel. If you are unsure or need to set any test parameters, see instructions on the next page or refer to the manual.

**2.a** Plug the three-prong plug of the DUT into the front panel receptacle of the ROD-L tester

**2.b** Connect the alligator clip of the Ground Sense Wire to the DUT.

**2.c** Press "Start." Testing light will light for a brief period of time and then return to ready mode if test passes.

**2.d** If failure light and audible alarm turn on, disconnect the DUT and press the Reset button on tester to cancel alarm.

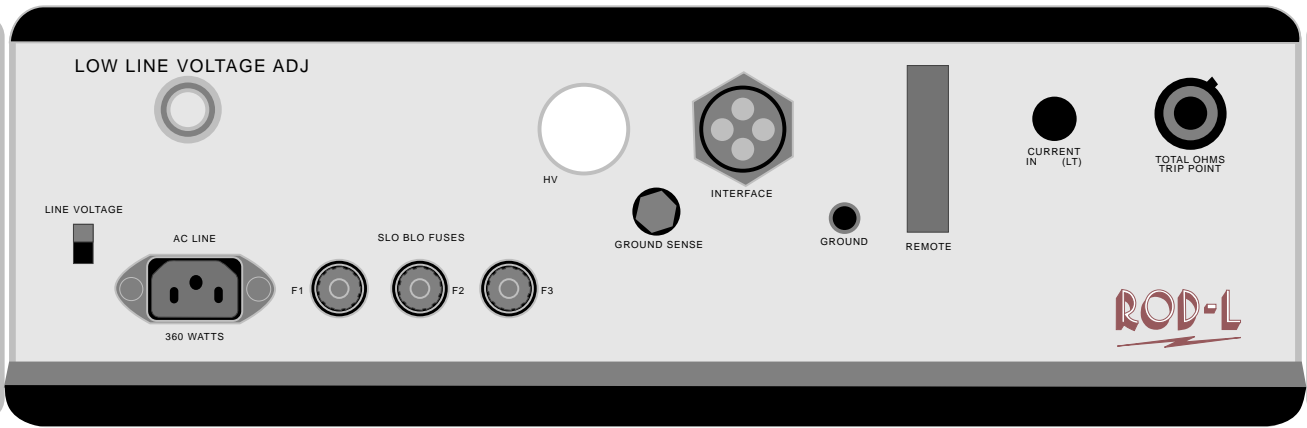

## I. Current Trip (ohms trip) potentiometer:

This is a 10-turn pot whose extreme clockwise position corresponds to the high-end of the resistance meter scale. A reading of 10.00 on the vernier dial of the pot equals .15 ohms, while a reading of 5.00 on the vernier dial equals .075 ohms, etc.

# General Safety Guidelines for ROD-L Units

---

[Note: The following information applies to all ROD-L units and is also contained in the user's manuals]

All ROD-L Electronics units are designed to assure maximum safety for the operators of the units. There are no extraordinary precautions necessary during their operation and setup, however, due to the fact that high voltage and high current are in use, there are some strongly recommended guidelines listed below:

There are a number of safety features built into ROD-L units that should never be removed or overridden. These are; 1) the chassis ground sense circuit, 2) The internal components of the front panel high voltage receptacle, 3) The recessed start button, 4) The alarm light and alarm tone, 5) The internal shut-down circuitry of the units, 6) The reset switch.

The units should only be connected to three-wire grounded outlets. The safety of the outlets should be periodically checked to insure safety.

Before initial operation, verify that the line input voltage selector switch (for 115 volts vs. 230 volts) is in the correct position.

Due to the fact that high voltage is also present at the rear panel voltage connector during operation of the unit, the connector when not used should be covered or the unit should be positioned in such a way that the metal contacts within it cannot be accidentally touched.

Before changing fuses in the units, the power switch should be turned-off and the power cord disconnected.

Do not touch the device-under-test or its power cord while a test is in progress.

Following the above precautions should eliminate hazard to the operator of the ROD-L unit, but it should be noted that the same common sense advice that would apply to the use of any electrical product should always be used when operating ROD-L units.